frontcover

CONGRATULATIONS!

Congratulations on your purchase of Zoner by Liquid Zone. This User Guide will help you to make the most out of fishing with Zoner. Please read it carefully before use, and keep it handy for your reference. Happy fishing!

CONTENT

1. FIRST STEPS WITH ZONER

1.1 Overview

1.1.1 Side view 4
1.1.2 Top view 5
1.1.3 Component view 6
1.1.4 LCD display segments 7

1.2 Getting started

1.2.1 Installing batteries 8
1.2.2 Using magnetic pen 9

1.3 Setting up 10

2. FISHING WITH ZONER

2.1 Attaching fishing line and lure 12
2.2 Fishing by pre-set depth 12
2.3 Fishing by pre-set water temperature 13
2.4 Getting the catch 14
2.5 What to do if 15
2.5.1 Fishing line breaks 15
2.5.2 Batteries run out while fishing 15

3. CARE AND MAINTANANCE

3.1 Zoner 16
3.2 Magnetic pen 16
3.3 Spare parts and accessories 17

4. HOW TO?

4.1 Change fin 18
4.2 Replace O-rings 19
4.3 Replace hydrofoil sealing nut 19

5. TECHNICAL SPECIFICATION 20

6. TROUBLE SHOOTING 22

7. SERVICE AND WARRANTY 23

1. FIRST STEPS WITH ZONER

1.1 Overview

1.1.1 Zoner side view

1 Hydrofoil
2 Fishing line mount A
3 Fishing line mount B
4 Hydrofoil sealing nut
5 Main body

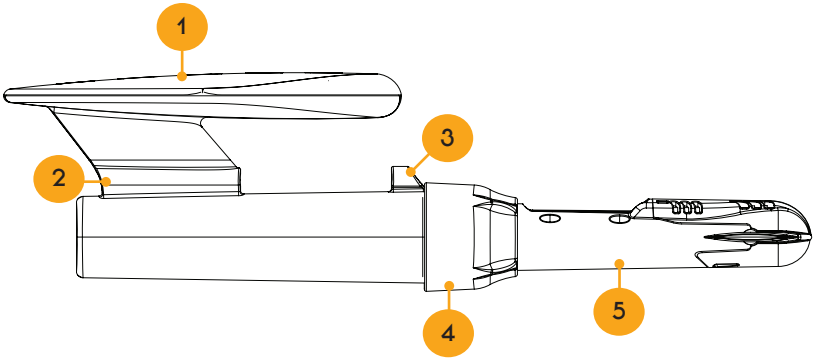

1.1.2 Zoner top view

6 LCD display
7 Power/+
8 Settings/-
9 +
10 –
11 Sensor cover
12 Fin
13 Magnetic pen

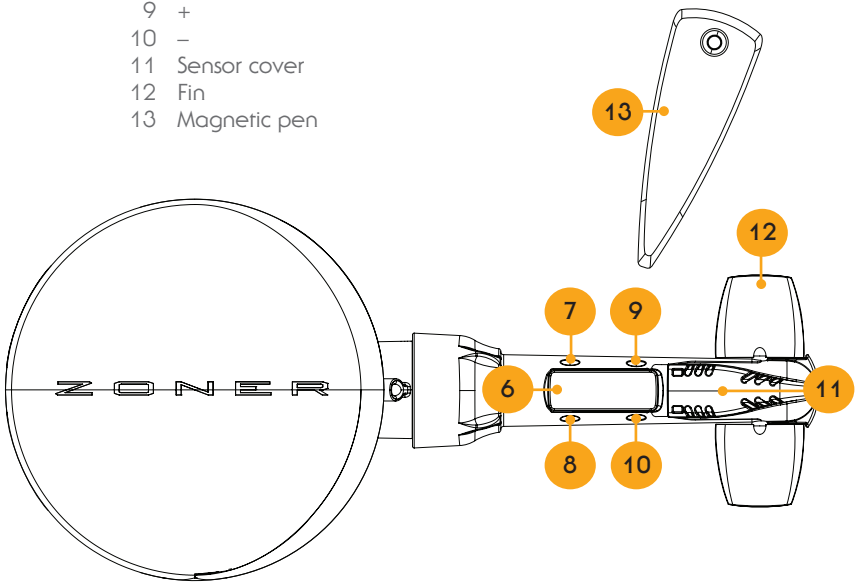

1. FIRST STEPS WITH ZONER

1.1 Overview

1.1.3 Zoner component view

14 -16 NBR O-Rings
17 Gasket
18 Battery compartment
19 Fin mounting mechanism and spring

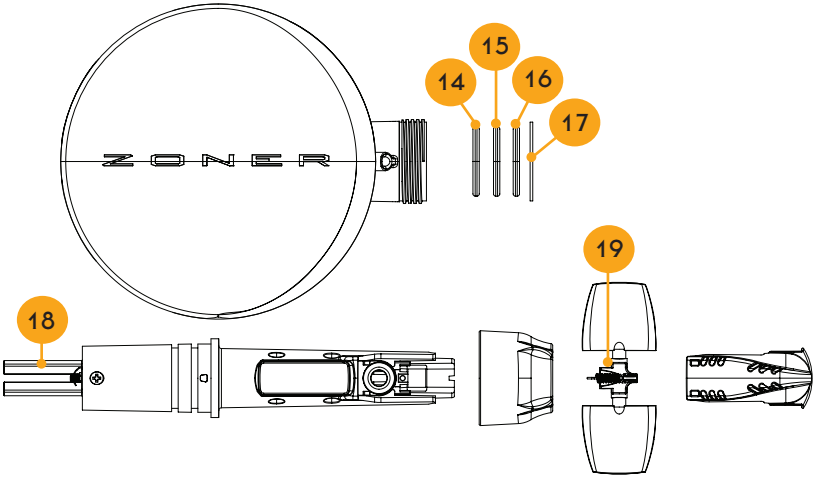

1.1.4 Zoner LCD display segments

20 Depth
21 Units: metric or imperial
22 Low battery indicator
23 Temperature
24 Units: Celsius or Fahrenheit
25 Pusher indicators

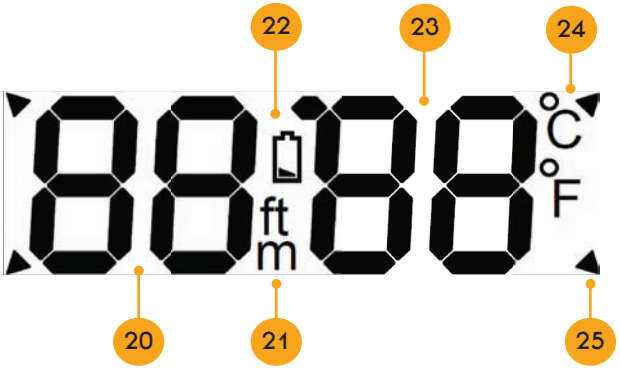

1. FIRST STEPS WITH ZONER

1.2 Getting started

1.2.1 Installing batteries

Open the battery compartment by detaching hydrofoil sealing nut (4) and gently pulling the main body (5). Image a).

Place batteries in the battery compartment (18), according to illustrations on the battery compartment.

Insert main body (5) into the hydrofoil (1) and seal Zoner by screwing the Hydrofoil sealing nut (4). Image b).

NOTE: 3 NBR O-rings on Zoner main body help Zoner stay watertight. Make sure the O-rings are clean and in correct place before sealing Zoner. You can also lubricate the O-rings using silicone-based grease.

NOTE: To help Zoner keep balance underwater, make sure to align main body (5) and hydrofoil (1). Image c).

1.2.2 Using magnetic pen

A magnetic pen (13) is used to wake up Zoner, adjust settings, and change values. In order to use it, simply, bring the tip of the magnetic pen close to the pusher area.

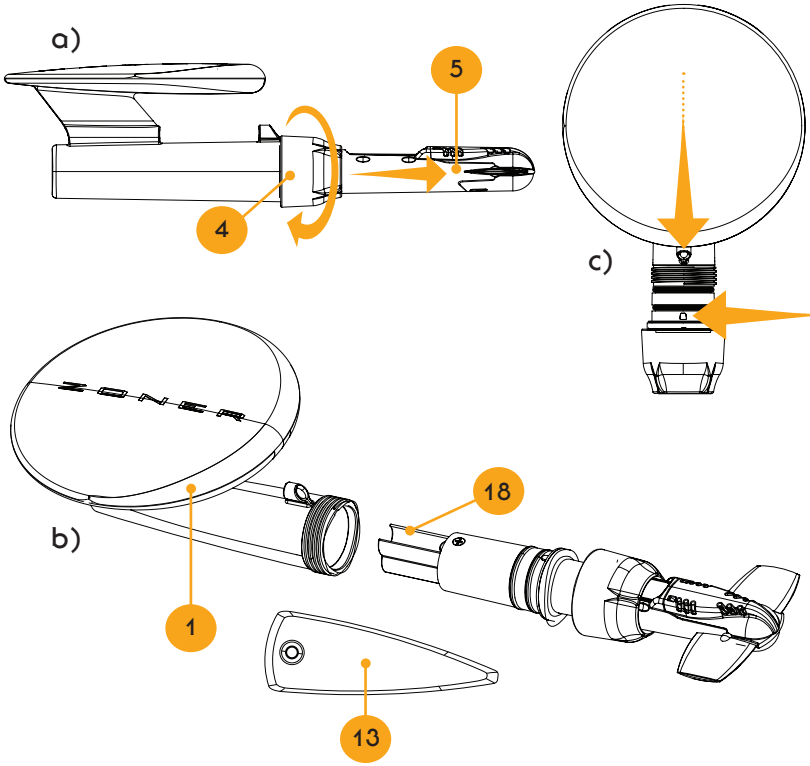
a)
5
4
c)
b)
18
1
13

1. FIRST STEPS WITH ZONER

1.3 Setting up

1.3.1 Activating Zoner

Wake up Zoner by touching the Power/+ (7) pusher with the magnetic pen (13). The device performs automated fin test and turns the fin up and down once. The fin points downward when Zoner is ready to use.

1.3.2 Selecting units

NOTE: Zoner is pre-set to metric values. If you like to change values from metric to imperial, wake up Zoner by touching the Settings/- pusher (8) with the magnetic pen (13) until "unit" text is displayed on the LCD screen (6).

Unit symbols (Feet or Meters) will blink on display. You can select desired units by touching + (9) / - (10) pusher areas. To save settings and turn Zoner off touch the Power/+ pusher (7).

1.3.3 Setting desired depth

Set desired depth by touching Power +/Settings - pusher areas with the magnetic pen (13).

1.3.4 Setting desired water temperature

Set water temperature by touching +/- pusher areas with the magnetic pen (13).

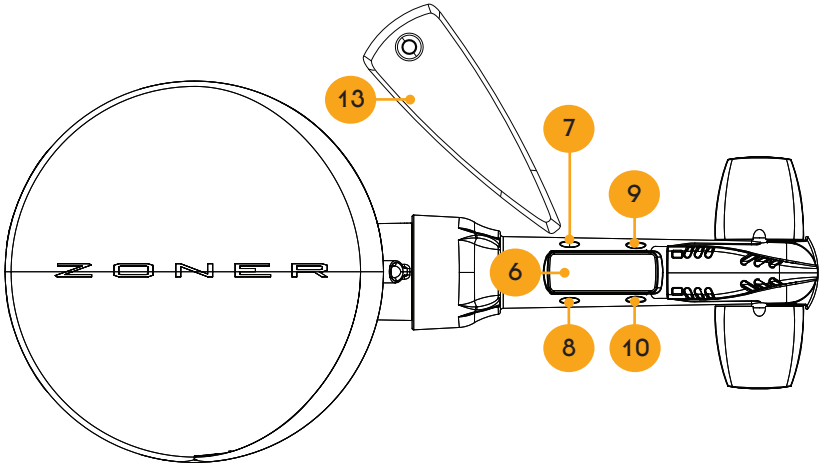

1.3.5 Switching off Zoner

There is no need to switch off Zoner. It does so automatically if not used for 5 minutes.

2. FISHING WITH ZONER

2.1 Attaching fishing line and lure

Feed the thicker trolling fishing line through Fishing line mount B (3) and Fishing line mount A (2). Tie the fishing line to a swivel (S) according to line manufacturer's instructions. Tie a weaker fishing line between swivel and lure. This will work as a fuse.

2.2 Fishing by pre-set depth

You can use Zoner to take the lure to pre-set depth. This operating mode comes in handy, when you know how deep the fish are (for example based on sonar readings). Zoner calculates depth by constantly measuring water pressure.

To pre-set desired depth follow instructions in **1.3.3 Setting desired depth.** Zoner operates within depth range of 1-20m/0-65ft

NOTE: Zoner will dive until one of the pre-set values (depth or temperature) has been reached. If you want to use Zoner to maintain a desired depth regardless of water temperature, set the water temperature to 0°C / 32°F.

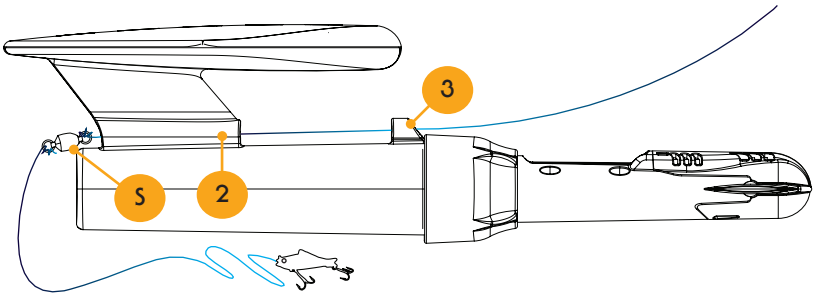

2.3 Fishing by pre-set water temperature

You can use Zoner to take the lure to water layer with pre-set water temperature. This operating mode is useful when you know the typical temperature range when a certain fish specie is active.

To pre-set desired water temperature follow instructions in **1.3.4 Setting desired water temperature** Zoner operates within water temperature range of 0-37°C / 32-99°F

NOTE: Zoner dives deeper until one of the pre-set values (depth or temperature) is reached. (continues on next page)

2. FISHING WITH ZONER

2.3 Fishing by pre-set water temperature

NOTE: Always remember to set maximum depth above the sea/lake bed. This will prevent Zoner from hitting sea/lake bed in case pre-set water temperature cannot be reached.

NOTE: If water is warmer (water temperature is higher) than the pre-set water temperature, Zoner continues to dive until it reaches pre-set water depth.

NOTE: If water is colder (water temperature is lower) than the pre-set water temperature, Zoner stays at the depth of 1m / 3ft.

2.4 Getting the catch

As soon as you get a catch, reel it up. When pulled from the lure, Zoner will turn into more upward position.

2.5 What to do if:

2.5.1 Fishing line breaks

Check the fishing line regularly and replace if needed.

In the rare event of the trolling line breaking, the line will slide through the hydrofoil loop, letting Zoner float to the surface and buoy freely.

In case the fishing line between Zoner and the lure breaks/ is cut, you will lose the lure. Zoner will still be attached to the trolling line, so you can reel it up.

2.5.2 Batteries run out while fishing

Before fishing with Zoner, always make sure that the low battery indicator is not visible on the LCD. If the low battery indicator is on, change batteries accordingly. If the batteries run out underwater while fishing, Zoner will turn the fins up, and float to the surface.

3. CARE AND MAINTANANCE

3.1 Zoner

Rinse Zoner with fresh water after every use. Especially make sure the fin and pressure sensor compartment are clean. Never use alcohol or any abrasive material (cleaning chemicals or steel wool) to clean the surface.

Regularly check the condition of O-rings and replace them if needed. Regularly check the condition of fin and the spring mechanism. Replace the spring if needed. Avoid dropping Zoner or the magnetic pen onto hard surfaces. Use silicone-based grease to lubricate O-rings in the battery compartment.

Handle all moving parts with care. Do not apply force to the fin, fin mounting mechanism, sensor cover or hydrofoil. These parts are easily damaged. Do not use any insecticides near Zoner, as they may damage the plastic surface. Do not store in a damp environment, in non-breathable material (for example a plastic bag). Do not expose to direct sunlight for extended periods. Keep Zoner out of extreme cold (below -10°C / 14°F) and heat (above 50°C / 120°F)

Only use good quality AAA batteries to guarantee best performance.

3.2 Magnetic pen

Clean the magnetic pen with a mild soap and water solution, dry with towel. Never use alcohol or any abrasive material to clean the surface. Keep the magnetic pen away from items sensitive to magnetic fields, such as credit cards, magnetic storage devices etc.

3.3 Spare parts and accessories

Following spare parts and accessories are available for Zoner.

- Magnetic Pen
- Fin Replacement Kit (includes fin, spring, sensor cover)
- Hydrofoil body (includes hydrofoil sealing nut)
- O-ring Replacement Kit (includes 3 Zoner O-rings)

Check www.liquidzone.fi to purchase accessories online or to find Your local dealer. Liquid Zone recommends that only original Liquid Zone accessories are used to ensure best performance. The use of fake or copied accessories may damage your product and voids your Liquid Zone warranty.

NOTE: to guarantee maximum lifetime we recommend servicing Zoner once a year if it is used heavily (approximately 500 hours of diving) or every second year of moderate use. Please contact your local dealer for details or visit www.liquidzone.fi

4. HOW TO?

4.1 Change fin

Gently lift and detach sensor cover (8) from the Main Body (5). Remove old fin and spring. Clean the sensor compartment as well as possible. Place new fin is in place, and attach it with new sprin. Image a). Turn on Zoner, to make sure fins are attached correctly, and re-attach the sensor cover.

NOTE: Use only clean water to clean the sensor compartment

4.2 Replace O-rings

Detach hydrofoil (1) from the main body (5). Remove batteries from the battery compartment. Pull and stretch O-rings (14-17) to remove them. Be careful not to scratch sealing surfaces. Clean sealing surfaces if needed. Replace new O-rings carefully. Place batteries to their compartment (18), insert main body into the hydrofoil, and seal Zoner by screwing the hydrofoil sealing nut (4) tightly. Image b).

4.3 Replace hydrofoil sealing nut

Follow instructions in point **4.1 Change fin**. Gently lift and detach sensor cover (8) from the main body (5). Remove old fin and spring. Image a).

Unscrew hydrofoil Sealing nut (4), and detach hydrofoil from main body. Remove old Hydrofoil Sealing nut by pulling it over the sensor compartment.

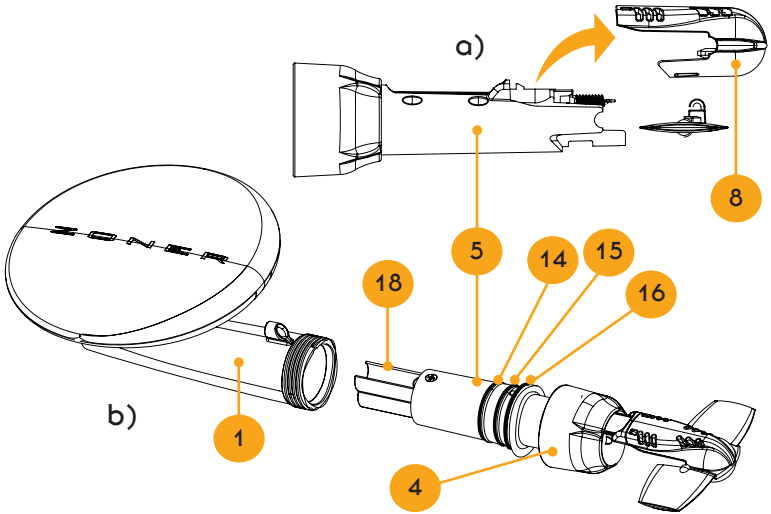

Replace with new hydrofoil sealing nut. Replace the fin, and attach it with spring. Make sure batteries are correctly placed in the battery compartment (17).

Insert the main body (5) into the hydrofoil (1) and seal Zoner by screwing new hydrofoil sealing nut (4) tightly. Turn on Zoner, to make sure fin is are attached correctly, and re-attach the sensor cover.

5. TECHNICAL SPECIFICATION

Liquid Zone reserves the right to change the specifications of the hardware and software described in this User Guide at any time and without prior notice. Liquid Zone will not be held liable for damages that may result from any mistakes that this manual may contain.

Liquid Zone will not be held liable for any damages resulting from the use of this product.

While every effort has been made to ensure that the information in these manuals is accurate and complete, we would appreciate if you could bring any errors or omissions to the attention of Liquid Zone.

CE This symbol means that this product is compliant with the European Union EMC directive 89/336/EEC.

Disposal of the device This symbol means that you should dispose of the product in an appropriate way, treating it as electronic waste. Please do not throw it in the garbage.

Battery type: 2 x AAA (LR03)
Battery lifetime: 24 Hours active trolling, 1 year in standby mode
Maximum depth: 50m/160ft
Storage temperature: from -20°C to +50°C (from -4°F to 122°F)

Operating temperature: 0-37°C / 32-99°F
Operating depth: 1-20m / 0-65ft

Limit values
Temperature: 0-37°C / 32-99°F
Depth: 1-20m / 0-65ft

Dimensions
Zoner
Length: 245 mm / 9.65 in
Width: 120 mm / 4.72 in
Height: 74 mm / 2.91 in
Weight: 179 g / 6.31oz (156 g / 5.50 oz without batteries)

Magnetic Pen
Length: 135 mm / 5.31 in
Width: 36 mm / 1.42 in
Height: 17 mm / 0.67 in
Weight: 17 g / 0.60 oz

6. TROUBLESHOOTING

SYMPTOM	SOLUTION
Zoner fin does not move / fin gets stuck	Clean sensor Compartment with clean water. Make sure fin is correctly attached to the main body, and that the spring is not broken and in place.
Zoner fin break	Replace with new fin
Magnetic pen does not work/ LCD display blank	Remove and replace batteries. If problem persists, contact Liquid Zone service. To determine if problem is related to the magnetic pen try using any magnet to see if the LCD activates.
Hydrofoil breaks	Replace with new hydrofoil
Hydrofoil nut wears out	Replace with new hydrofoil nut
Water in the battery compartment	Open the battery compartment. Remove the batteries, rinse battery compartment with fresh water and leave to dry.

7. SERVICE AND WARRANTY

About the manual

No part of the manuals included with this product may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form, by any means, without Liquid Zone's prior written permission.

Liquid Zone reserves the right to change the specifications of the hardware and software described in these manuals at any time and without prior notice.

While every effort was made to ensure that the information in this manual is accurate and complete, we would appreciate it if you could bring any errors or omissions to the attention of the Liquid Zone.

Copyright, trademark and patent notice

This user manual is copyrighted and all rights are reserved. Liquid Zone, Zoner and their logos are all registered or unregistered trademarks of Liquid Zone Oy. All rights are reserved.

7. SERVICE AND WARRANTY

Liquid zone limited warranty

This warranty is valid as of March 2011, and is provided to all who have purchased Liquid Zone products or accessories. Liquid Zone warrants that during the warranty period it will repair, replace or refund products with defects in material or workmanship. This warranty is valid for original consumers/purchasers of the product and the receipt of the original purchase is proof of purchase. It is valid in the country in which the product was purchased, provided that Liquid Zone has intended the product for sale in that country.

The warranty period starts at the date of retail purchase by the original consumer/purchaser, and is 1 year for all products and accessories.

The warranty does not cover normal wear and tear, damages caused by misuse, rough handling or improper maintenance. Opening or modifying the product, using spare parts other than provided by Liquid Zone, erasing or modifying product serial number could void this warranty.

To the maximum extent permitted by applicable mandatory laws, this Limited Warranty is your sole and exclusive remedy and is in lieu of all

other warranties, expressed or implied. The warranty does not cover any damage/s, losses, costs or expenses, direct, indirect or incidental, consequential or special, arising out of, or related to the product.

Liquid Zone will not be liable for delay in providing service under this Limited Warranty, or loss of use during the time the product is under service. This guarantee does not affect the consumer's statutory rights under applicable national or state laws in force, or the consumer's rights against the dealer arising from their sales/purchase contract.

Disclaimer

The material in this manual is for informational purposes only.
The products it describes are subject to change without prior notice, due to the Liquid Zone's continuous development program.

ZONER

ZONER

CHOOSE YOUR CATCH

KÄYTTÖOPAS

LIQUIDZONE

ONNEKSI OLKOON!

Onneksi olkoon, olet hankinut Zoner älysyvääjän! Tässä käyttöohjeessa opastetaan miten saat suurimman hyödyn vetouistellessa Zoner-älysyvääjän kanssa. Lue tämä käyttöohje huolellisesti ennen Zoner-älysyvääjän käyttöä ja säilytä se. Kireitä siimoja!

SISÄLTÖ

1. ZONER ÄLYSYVÄÄJÄN KÄYTTÖÖNOTTO

1.1 Yleistä

1.1.1 Zoner sivusta 30
1.1.2 Zoner ylhäältä 31
1.1.3 Zoner purettuna 32
1.1.4 LCD näytön symbolit 33

1.2 Ennen käyttöönottoa

1.2.1 Paristojen asennus 34
1.2.2 Magneettikynän käyttö 35

1.3 Käyttöönotto 36

2. ZONERIN KÄYTTÖ
2.1 Siiman kiinnittäminen 38
2.2 Kalastaminen syvyysasetuksella 38
2.3 Kalastaminen lämpöasetuksella 39
2.4 Saaliin iskiessä 40
2.5 Mitä jos? 41
2.5.1 Vetosiima katkeaa 41
2.5.2 Paristot tyhjenevät uistellessa 41

3. HOITO JA KUNNOSSAPITO
3.1 Zoner 42
3.2 Magneettikynä 42
3.3 Varaosat ja lisävarusteet 43

4. MUUT KÄYTTÖOHJEET
4.1 Evän vaihto 44
4.2 O-renkaiden vaihto 45
4.3 Hydrofoilin kiinnitysmutterin vaihto 45

5. TEKNISET TIEDOT 46
6. RATKAISUJA ONGELMIIN 48
7 .HUOLTO JA TAKUU 49

1. ÄLYSYVÄÄJÄN KÄYTTÖÖNOTTO

1.1 Yleistä

1.1.1 Zoner sivusta

1 Hydrofoili
2 Siiman takaohjain
3 Siiman etuohjain
4 Hydrofoilin kiinnitysmutteri
5 Runko

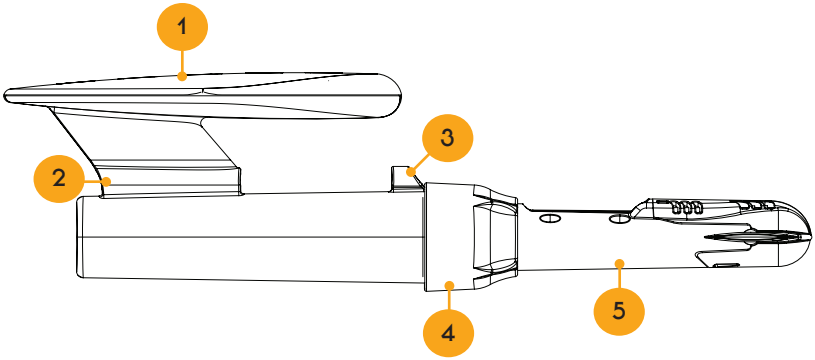

1.1.2 Zoner ylhäältä

6 LCD näyttö
7 Käynnistys/+
8 Asetukset/-
9 +
10 –
11 Anturisuoja
12 Evät
13 Magneettikynä

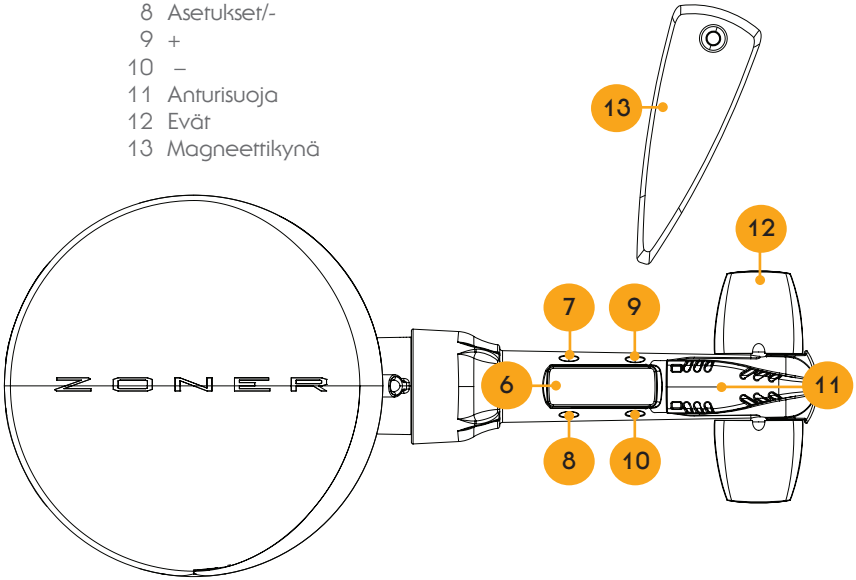

1. ÄLYSYVÄÄJÄN KÄYTTÖÖNOTTO

1.1 Yleistä

1.1.3 Zoner purettuna

14-16 NBR O-renkaat
17 Tasotiiviste
18 Paristokotelo
19 Evien kiinnitysmekanismi ja jousi

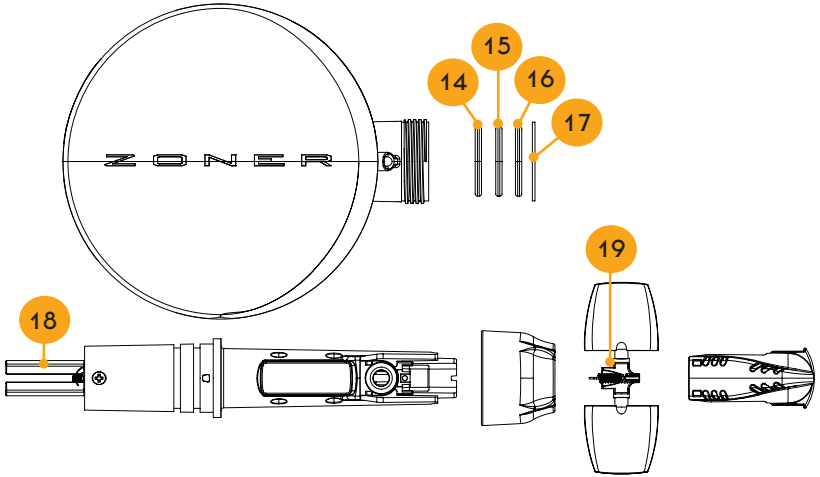

1.1.4 LCD näytön symbolit

20 Asetettu maksimisyvyys
21 Yksiköt: metriä/jalkaa
22 Vaihda paristot -merkki
23 Asetettu lämpötila
24 Yksiköt: Celsius (°C) /Fahrenheit (°F)
25 Näppäinten toiminto -merkit

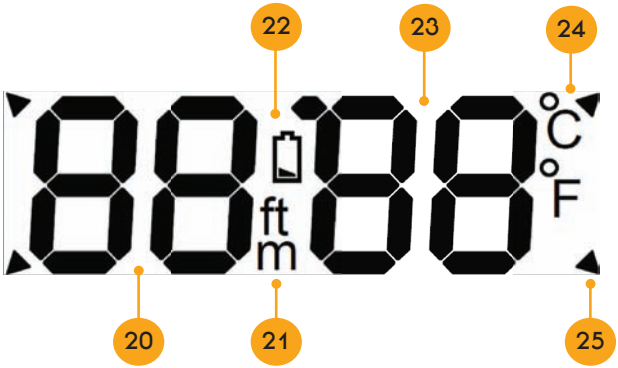

1. ÄLYSYVÄÄJÄN KÄYTTÖÖNOTTO

1.2 Ennen käyttöönottoa

1.2.1 Paristojen asennus

Avaa paristokotelo kiertämällä hydrofoilin kiinnitysmutteri (4) auki ja vetämällä runko (5) varovasti irti hydrofoilista (1). Kuva a). Aseta paristot paikoilleen rungon paristokotelon (18) kuvien mukaisesti. Kuva b).

Työnnä runko (5) ja hydrofoili (1) yhteen ja kierrä hydrofoilin kiinnitysmutteri (4) kiinni. Kuva b).

HUOM! Nämä 3 NBR O-rengasta pitävät Zoner älysyvääjän vesitiiviinä. Varmista että O-renkaat ovat puhtaat, ehjät ja oikeilla paikoillaan ennen kuin suljet Zoner älysyvääjän. O-renkaat on myös syytä voidella silikonipohjaisella rasvalla säännöllisesti.

HUOM! Varmista että runko (5) ja hydrofoili (1) on asennettu alla olevan kuvan mukaisestisuoraan kun suljet Zoner älysyvääjän. Näin Zoner ui oikein vetouistellessa. Kuva c).

1.2.2 Magneettikynän käyttö

Magneettikynää (13) käytetään Zoner älysyvääjän käynnistämiseen, asetusten tekemiseen sekä syvyys- ja lämpötila-arvojen muuttamiseen. Magneettikynän käyttö on helppoa; kosketa vain kynän kärjellä näppäinaluetta.

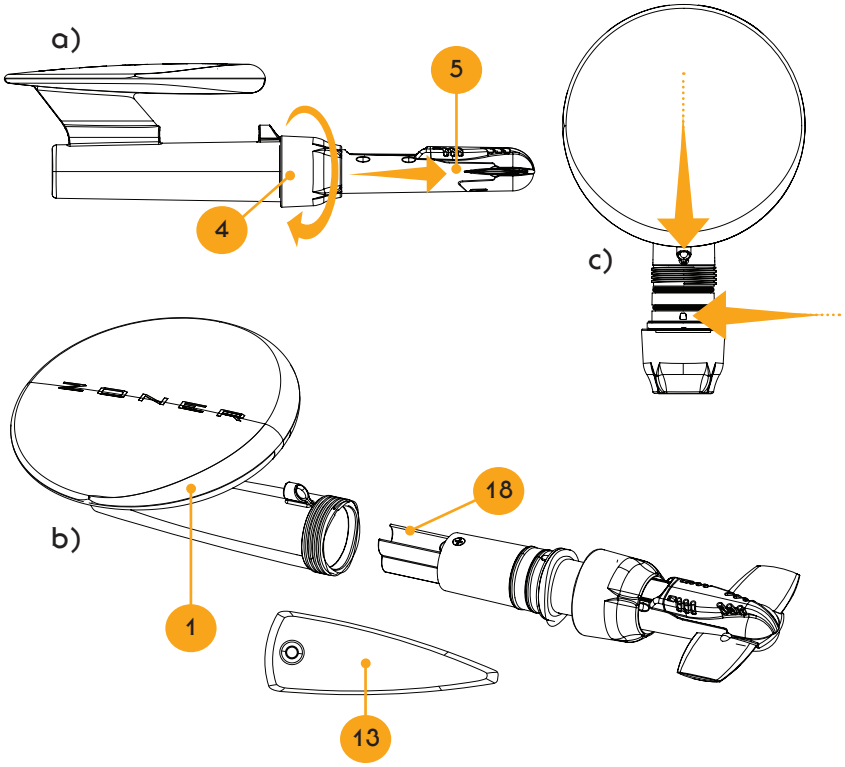
a)
5
4
c)
b)
18
1
13

1. ÄLYSYVÄÄJÄN KÄYTTÖÖNOTTO

1.3 Käyttöönotto

1.3.1 Älysyvääjän käynnistäminen

Käynnistä Zoner koskettamalla Käynnistä/+ näppäinaluetta magneettikynällä (13). Zoner suorittaa automaattisen evätestin kääntämällä evät ensin ylös ja sitten alas. Zoner on valmis käyttöön, kun evät osoittavat alaspäin.

1.3.2 Yksiköiden vaihtaminen

HUOM! Zoner on asetettu valmiiksi tehtaalla toimimaan metrisillä yksiköillä. Jos kuitenkin haluat muuttaa yksiköitä, käynnistä Zoner koskettamalla Asetukset/- (8) näppäinaluetta magneetti-kynällä (13) n. 2s ajan kunnes "unit" teksti tulee näkyviin LCD näytölle.

Yksikkö symbolit (m/°C tai ft/°F) vilkkuvat näytöllä ja voit valita haluamasi koskettamalla + (9) - (10) näppäinaluetta. Asetus tallennetaan koskettamalla Käynnistä/+ (7) näppäinaluetta.

1.3.3 Halutun maksimisyvyyden asettaminen

Aseta haluttu maksimisyvyys koskettamalla Käynnistä/+ (7) ja Asetukset/- (8) näppäinalueita magneettikynällä (13)

1.3.4 Halutun lämpötilan asettaminen

Aseta haluttu lämpötila koskettamalla + (9) ja – (10) näppäinalueita magneettikynällä (13)

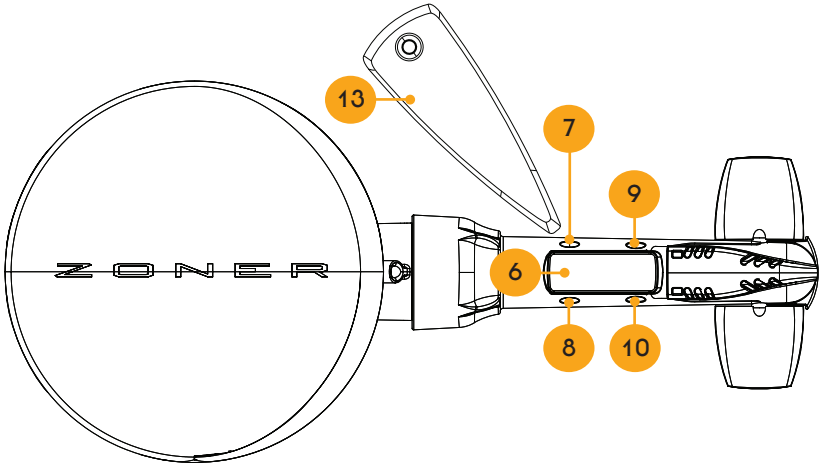

1.3.5 Zoner älysyvääjän sammuttaminen

Zoner älysyvääjää ei ole tarpeen sammuttaa. Laite kytkeytyy automaattisesti pois päältä, jos sitä ei ole käytetty yli viiteen minuuttiin.

2. ZONERIN KÄYTTÖ

2.1 Siiman kiinnittäminen

Pujota vetosiima etuohjaimen (3) ja takaohjaimen (2) läpi. Sido vetosiima leikkariin (L) siimanvalmistajan ohjeiden mukaisesti. Sido ohuempi siima (tapsi) leikarin ja vieheen välille. Tapsi toimii näin sulakkeena.

2.2 Kalastaminen syvyysasetuksella

Voit asettaa Zonerin seuraamaan haluttua syvyyttä. Tämä toiminto on käytännöllinen jos tiedät millä syvyydellä kalat ovat (esim. kaikuluotaimen perusteella). Zoner laskee syvyyden mittaamalla vedenpainetta.

Syvyysarvon asettamiseksi seuraa **"Halutun maksimisyvyyden asettaminen"** kohdan ohjeita. Zoner toimii 1-20 m/0-65 ft syvyysalueella.

HUOM! Zoner sukeltaa syvemmälle kunnes toinen asetusarvoista tulee vastaan (syvyys tai lämpötila). Jos haluat Zonerin hakeutuvan asetettuun syvyyteen riippumatta lämpötilasta, aseta lämpötila-arvoksi 0°C.

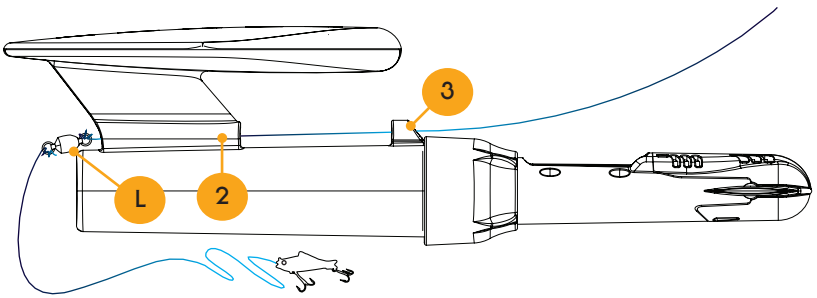

2.3 Kalastaminen Lämpötila-Asetuksella

Voit asettaa Zonerin seuraamaan haluttua lämpötilakerrosta. Tätä toimintoa kannattaa käyttää jos tiedät, missä lämpötilassa pyydystämäsi kala saalistaa.

Asettaaksesi lämpötila-arvon, seuraa "Halutun lämpötilan asettaminen" kohdan ohjeita. Zoner toimii 0-37°C / 32-99°F vedenlämpötiloissa.
(jatkuu seuraavalla sivulla)

2. FISHING WITH ZONER

2.3 Kalastaminen Lämpötila-Asetuksella

HUOM! Zoner sukeltaa syvemmälle kunnes toinen asetusarvoista tulee vastaan (syvyys tai lämpötila).

HUOM! Kalastaessasi lämpötila-asetuksella, muista asettaa myös syvyysarvo pienemmäksi kuin kalastamallasi alueella oleva matalin kohta. Näin vältyt mahdolliselta pohjakosketukselta.

HUOM! Mikäli Zoner ei löydä asettamaasi lämpötilakerrosta veden ollessa liian lämmintä, se seuraa asettamaasi syvyysarvoa vastaavaa syvyyttä.

HUOM! Mikäli Zoner ei löydä asettamaasi lämpötilakerrosta veden ollessa liian kylmää, se seuraa yhden metrin syvyyttä.

2.4 Saaliin iskiessä

Zoner kääntyy ylöspäin kun vieheeseen tulee kuormitusta.
Tämä helpottaa saaliin ylös nostamista.

2.5 Mitä jos?

2.5.1 Vetosiima katkeaa

Tarkista vetosiiman kunto säännöllisesti, ja käytä tapsissa heikompaa siimaa. Mikäli siima kuitenkin katkeaa, se liukuu Zonerin läpi päästäen sen pintaan. Tapsin katketessa menetät vain vieheen. Zoner pysyy kiinni vetosiimassa.

2.5.2 Paristot tyhjenevät uistellessa

Tarkista Zonerin näytöltä, ettei vaihda paristot –merkki ole näkyvissä. Vaihda paristot aina, mikäli vaihda paristot –merkki on näkyvissä. Mikäli paristot tyhjenevät käytön aikana, Zoner nousee pintaan automaattisesti.

3. HOITO JA KUNNOSSAPITO

3.1 Zoner

Huuhtele Zoner puhtaalla vedellä jokaisen käytön jälkeen. Pidä huoli, että etuosa, jossa evä ja paineanturi sijaitsevat on puhdas. Älä koskaan käytä alkoholia tai hiovia materiaaleja (puhdistuskemikaaleja tai teräsvillaa) puhdistukseen.

Tarkista tiivisteiden kunto säännöllisesti ja vaihda ne tarvittaessa. Tarkista säännöllisesti myös evän ja palautusjousen kunto, vaihda jousi tarvittaessa. Vältä pudottamasta Zoneria tai magneettikynää kovalle alustalle. Käytä silikonipohjaista rasvaa tiivisteiden voiteluun paristokotelossa.

Käsittele kaikkia liikkuvia osia huolella. Älä käytä voimaa evään, evän kiinnitysmekanismiin, anturisuojaan tai hydrofoiliin. Nämä osat ovat erityisen herkkiä rikkoontumaan. Vältä saattamasta hyönteismyrkkyjä kosketuksiin Zonerin kanssa, koska nämä saattavat tuhota muoviosia. Älä säilytä Zoneria kosteassa tilassa tai tuulettumattomassa tilassa (kuten muovikassissa). Älä jätä Zoneria suoraan auringon paisteeseen pitkäksi aikaa. Pidä Zoner poissa erityisen kylmästä (alle -10°C/14°F) tai kuumasta (yli 50°C/120°F).

Käytä vain hyvälaatuisia AAA paristoja parhaan toiminta-ajan saavuttamiseksi.

3.2 Magneettikynä

Puhdista magneettikynä tarvittaessa miedolla saippualla ja vedellä, kuivaa pyyhkeellä. Älä koskaan käytä alkoholia tai hiovia materiaaleja puhdistukseen. Pidä magneettikynä etäällä magneettikentille herkistä esineistä, kuten luottokortit, kiintolevyt, jne.

3.3 varaosat ja lisävarusteet

Seuraavia varaosia ja lisävarusteita on saatavilla Zoneriin

- Magneettikynä
- Evän vaihtosarja (sisältää evän, jousen, anturisuojan)
- Hydrofoili (sisältää hydrofoilin kiinnitysmutteri)
- Paristokotelon tiivistesarja (sisältää 3 Zoner O-rengasta)

Voit ostaa varaosia ja lisävarusteita internetistä tai lähimmältä jälleenmyyjältä, lisätietoja saat www.liquidzone.fi sivuilta. Liquid Zone suosittelee ainoastaan alkuperäisten Liquid Zone varaosien käyttöä parhaan suorituskyvyn saavuttamiseksi.

HUOM! Mahdollisimman pitkän käyttöiän saavuttamiseksi suosittelemme Zonerin huoltamista kerran vuodessa jos käyttö on erityisen kovaa (noin 500 tuntia / vuosi) tai kerran kahdessa vuodessa jos käyttö on kohtalaista. Lisätietoja saat lähimmältä jälleenmyyjältä tai www.liquidzone.fi sivuilta.

4. MUUT KÄYTTÖOHJEET

4.1 Evän vaihto

Irroita anturisuoja (8) varovasti rungosta (5). Irroita vanha evä ja jousi. Puhdista etuosa mahdollisimman huolellisesti. Aseta uusi evä paikalleen ja lukitse se paikalleen jousen avulla. Kuva a).

Käynnistä Zoner varmistaaksesi evän oikea asennus ja kiinnitä anturisuoja paikalleen.

HUOM! Käytä ainoastaan puhdasta makeaa vettä etuosan puhdistukseen.

4.2 O-renkaiden vaihto

Irroita hydrofoili rungosta ja poista paristot. Poista vanhat O-rengas tiivisteet varoen vahingoittamasta tiivistepintoja. Puhdista tiivistepinnat tarvittaessa. Aseta uudet tiivisteet varovasti paikalleen. Laita paristot paikalleen, liitä hydrofoili runkoon ja sulje Zoner hydrofoilin kiinnitysmutterilla. Kuva b).

4.3 Hydrofoilin kiinnitysmutterin vaihto

Seuraa kohdan **4.1 "Evän vaihto"** ohjeita. Irroita anturinsuoja (11) varovasti rungosta (5). Irroita evä ja jousi. Kuva a).

Ruuvaa hydrofoilin kiinnitysmutteri (4) irti ja irroita hydrofoili rungosta. Poista vanha hydrofoilin kiinnitysmutteri pujottamalla se etuosan yli ja vaihda uusi

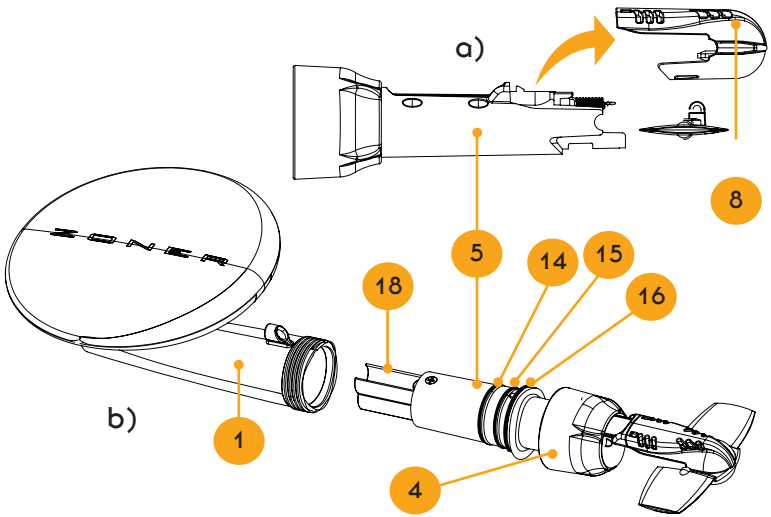

kiinnitysmutteri tilalle. Asenna evä, jousi ja paristot paikalleen.
Aseta hydrofoili (1) runkoon (5) ja sulje Zoner ruuvaamalla hydrofoilin kiinnitysmutteri (4) tiukasti paikalleen.

Käynnistä Zoner tarkistaaksesi oikea asennus ja aseta tämän jälkeen anturinsuoja paikalleen.

5. TEKNISET TIEDOT

Liquid Zone pidättää kaikki oikeudet muuttaa tässä käyttöohjeessa kuvattuja laitteen ominaisuuksia ilman erillistä ilmoitusta. Liquid Zone ei ota vastuuta mistään mahdollisista vahingoista, jotka aiheutuvat tämän käyttöohjeen mahdollisesti sisältämistä virheistä.

Liguid Zone ei ole vastuussa mistään mahdollisista tuotteen käytön aiheuttamista suorista tai välillisistä vahingoista.

Vaikka olemme tehneet kaikkemme varmistaaksemme tietojen oikeellisuuden tässä käyttöohjeessa, olemme erittäin kiitollisia saattaessanne Liquid Zonen tietoon mahdolliset virheet.

CE Tämä symboli merkitsee sitä, että tämä tuote noudattaa Euroopan Unionin EMC directiiviä 89/336/EEC.

Tuotteen hävittäminen Tämä symboli merkitsee sitä, että tuote tulee hävittää elektronisen jätteen tavoin. Älä heitä tuotetta roskikseen.

Paristot: 2 x AAA (LR03)
Paristojen kesto: 24 tuntia aktiivista vetouistelua, 1 vuosi lepotilassa
Maksimisyvyys: 50m / 160ft
Säilytyslämpötila: -20°C -> +50°C (-4°F -> +122°F)

Käyttölämpötila: 0°C -> +37°C / 32°F -> 99°F
Käyttösyyvyys: 1-20m / 0-65ft

Raja-arvot
Lämpötila: 0-37°C / 32-99°F
Syvyys: 1-20m / 0-65ft

Mitat
Zoner
Pituus: 245 mm / 9.65 in
Leveys: 120 mm / 4.72 in
Korkeus: 74 mm / 2.91 in
Paino: 179 g / 6.31oz (156 g / 5.50 oz ilman paristoja)

Magneettikynä
Pituus: 135 mm / 5.31 in
Leveys: 36 mm / 1.42 in
Korkeus: 17 mm / 0.67 in
Paino: 17 g / 0.60 oz

6. RATKAISUJA ONGELMIIN

ONGELMA	RATKAISU
Zonerin evät eivät liiku tai ovat jumissa	Puhdista etuosa puhtaalla vedellä. Varmista evien oikea asennus runkoon. Varmista, että jousi on oikein paikallaan eikä se ole viallinen.
Evät ovat vialliset	Vaihda uudet evät
Magneettikynä ei toimi / Näyttö on tyhjä	Vaihda paristot uusiin, jos ongelma ei korjaannu, ota yhteyttä Liquid Zone huoltoon. Selvittääksesi liittyykö ongelma magneettikynään, kokeile käyttää jotain muuta magneettia Zonerin aktivoimiseksi.
Hydrofoili rikkoontuu	Vaihda uusi hydrofoili
Hydrofoilin kiinnitys-mutteri on kulunut	Vaihda hydrofoilin kiinnitysmutteri uuteen
Paristokotelossa on vettä	Avaa paristokotelo, poista paristot ja anna osien kuivua. Asenna paristot paikalleen ja sulje Zoner huolellisesti. Tiivistä NBR O-renkaat silikonirasvalla

7. HUOLTO JA TAKUU

Käyttöohjeesta

Mitään osaa tuotteen mukana toimitetusta käyttöohjeesta ei saa kopioida, edelleen lähettää, uudelleen kirjoittaa, tallentaa hakujärjestelmään, kääntää millekään kielelle, missään muodossa eikä miten kään ilman Liquid Zonen myöntämää kirjallista lupaa.

Liquid Zone pidättää kaikki oikeudet muuttaa tässä käyttöohjeessa kuvattuja laitteen ominaisuuksia ilman erillistä ilmoitusta. Liquid Zone ei ole vastuussa mistään mahdollisista tuotteen käytön aiheuttamista vahingoista.

Vaikka olemme tehneet kaikkemme varmistaaksemme tietojen oikeellisuuden tässä käyttöohjeessa, olemme erittäin kiitollisia saattaessanne Liquid Zonen tietoon mahdolliset virheet.

Huomautus tekijän oikeuksista, tavaramerkistä ja patenteista

Tämä käyttöohje on suojattu tekijänoikeuslailla. Kaikki oikeudet pidätetään. Liquid Zone, Zoner ja niiden logot ovat kaikki Liquid Zone Oy:n rekisteröityjä tai rekisteröimättömiä tavaramerkkejä.
Kaikki oikeudet pidätetään.

7. HUOLTO JA TAKUU

Liquid Zone rajoitettu takuu

Tämä takuu on voimassa huhtikuusta 2011 lähtien, ja on tarkoitettu kaikille, jotka ovat ostaneet Liquid Zonen tuotteita tai tarvikkeita. Liquid Zone takaa takuuajan puitteissa korvaavansa tai hyvittävänsä tuotteet, joissa vika liittyy materiaaliin tai asennukseen. Tämä takuu on voimassa tuotteen alkuperäiselle ostajalle. Alkuperäinen kuitti tuotteen ostamisesta on todiste ostamisesta. Se on voimassa siinä maassa missä tuote on ostettu, sillä edellytyksellä että Liquid Zone on tarkoittanut tuotteen myytäväksi tässä maassa.

Takuuaika alkaa päivämäärästä, jolloin tuotteen alkuperäinen ostaja ostaa tuotteen ja on voimassa 1 vuoden koskien kaikkia tuotteita ja tarvikkeita.

Takuu ei kata normaalia kulumista, väärinkäytöstä aiheutuneita vaurioita, kovakouraisesta käsittelystä tai vääränlaisesta huollosta aiheutuneita vaurioita. Tuotteen avaaminen tai modifioiminen, muiden kuin Liquid Zonen varaosien käyttäminen, tuotteen sarjanumeron poistaminen tai muuttaminen saattaa mitätöidä tämän takuun.

Tämä rajattu takuu on sinun ainoa ja yksinomainen takuu ja se korvaa kaikki muut suorat tai epäsuorat takuut. Takuu ei kata vikoja, menetyksiä, kuluja tai maksuja, suoria, epäsuoria tai satunnaisia, välillisiä tai erityisiä, jotka johtuvat tuotteesta tai voidaan yhdistää tuotteeseen.

Liquid Zone ei ole vastuussa viivästymisistä tai tappioista, jotka aiheutuvat tämän rajoitetun takuun puitteissa tehtävistä korjauksista. Tämä takuu ei vaikuta kuluttajan voimassa olevien kansallisten lakien mukaisiin oikeuksiin, tai kuluttajan ja kauppiaan välisin sopimuksin syntyneisiin oikeuksiin.

Vastuuvapaus

Tämän käyttöohjeen sisältö on tarkoitettu ainoastaan kuluttajien tiedottamiseen. Ohjeessa kuvattuja tuotteita saatetaan muuttaa ilman ennakkoilmoitusta, koska Liquid Zone jatkaa tuotteiden kehittämistä.

backcover